


Instructie Score bediening zittingdrager 5100

1



Bediening gaslift

2

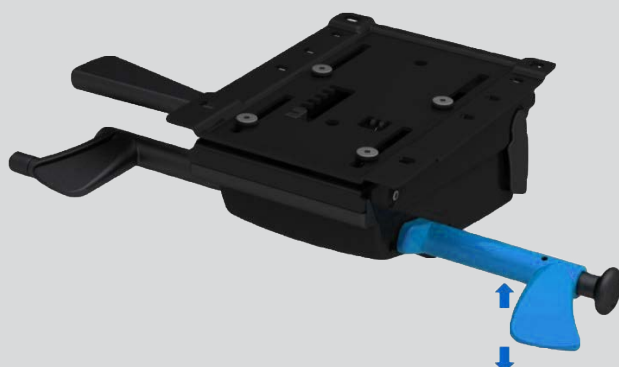

Lock/unlock synchro

3



Gewichtsinstelling

4



Lock/unlock extra 2^e voorover

5



Bediening schuif

Score B.V.
Lange Akkers 10
9351 VP Leek
The Netherlands

+31 (0) 594 55 40 00
info@scoreseating.com